

Outdoor Fire Ring

by Fire Ring King

FOR YOUR SAFETY

Operating Instructions

Lighting

1. Make sure there is no more than a small amount of ash in the bottom of the outdoor Fire Ring.
2. Place a layer of dry kindling or a natural fire starter in the center.
3. Place above that of dry kindling a layer of dry seasoned hardwood that is cut to lengths no more than 3/4 the diameter of the outdoor Fire Ring.
4. Use a match or fire starter to light kindling.
5. Using a hook and heat resistant gloves, position the grate once the kindling is lit.

Tending the Fire

1. You may need to shift and/or add logs for an ideal experience.
2. Do NOT place a hot grate or hot fireplace tools onto combustible surfaces such as grass, leaves, wooden deck, or furniture.
3. Always use a hook and heat resistant gloves to position the grate.
4. Always use a long-handled fireplace tool to shift coals and logs to allow additional airflow.
5. Do NOT add gasoline, kerosene, diesel fuel, lighter fluid, or alcohol to relight or enhance an existing fire.
6. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top coals. Be careful not to shift ashes.

Extinguishing

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to the outdoor Fire Ring.

Inspecting

1. The outdoor Fire Ring should be inspected on a regular basis to ensure product safety and longer product life.
2. Do NOT attempt to inspect the outdoor Fire Ring until the fire is COMPLETELY out.
3. Routinely check the grate and any other sliding or moveable parts of the outdoor Fire Ring to make sure everything is secure.
4. If damage to any component is detected, do NOT operate until repairs are executed.

Cleaning

1. The outdoor Fire Ring should be cleaned on a regular basis to promote safer experiences and longer product life.
2. Do NOT attempt to clean the outdoor Fire Ring until the fire is COMPLETELY out.
3. Do NOT use oven cleaner or abrasive cleaners as they will damage this product.
4. Do NOT use pressure washer to clean the outdoor Fire Ring.
5. Remove built-up creosote from with a chimney cleaning product. **WARNING:** Wear appropriate gloves, protective clothing, eye protection, and a mask when cleaning, because creosote is a toxic substance.

Deaths, serious injury, or damage to property may occur if the above is not followed exactly.